

Tabela do índice de carga do pneu

A tabela a seguir mostra como os índices de carga se traduzem em peso (kg).

Índice de Carga	Carga (kgs)	Índice de Carga	Carga (kgs)	Índice de Carga	Carga (kgs)
80	450	120	1,400	160	4,500
81	462	121	1,450	161	4,625
82	475	122	1,500	162	4,750
83	487	123	1,550	163	4,875
84	500	124	1,600	164	5,000
85	515	125	1,650	165	5,150
86	530	126	1,700	166	5,300
87	545	127	1,750	167	5,450
88	560	128	1,800	168	5,600
89	580	129	1,850	169	5,800
90	600	130	1,900	170	6,000
91	615	131	1,950	171	6,150
92	630	132	2,000	172	6,300
93	650	133	2,060	173	6,500
94	670	134	2,120	174	6,700
95	690	135	2,180	175	6,900
96	710	136	2,240	176	7,100
97	730	137	2,300	177	7,300
98	750	138	2,360	178	7,500
99	775	139	2,430	179	7,750
100	800	140	2,500	180	8,000
101	825	141	2,575	181	8,250
102	850	142	2,650	182	8,500
103	875	143	2,725	183	8,750
104	900	144	2,800	184	9,000
105	925	145	2,900	185	9,250
106	950	146	3,000	186	9,500
107	975	147	3,075	187	9,750
108	1,000	148	3,150	188	10,000
109	1,030	149	3,250	189	10,300
110	1,060	150	3,350	190	10,600
111	1,090	151	3,450	191	10,900
112	1,120	152	3,550	192	11,200
113	1,150	153	3,650	193	11,500
114	1,180	154	3,750	194	11,800
115	1,215	155	3,875	195	12,150
116	1,250	156	4,000	196	12,500
117	1,285	157	4,125	197	12,850
118	1,320	158	4,250	198	13,200
119	1,360	159	4,375	199	13,600